HEAVEN'S BRIDGE®

Spirit Box

USER GUIDE

Every device is individually hand-checked and numbered.

Check it is original: **dennisvalchez.com/verify**. Keep your secret code private.

English · Русский · Українська · Қазақша · Español · Português · Français · Deutsch · Italiano · Nederlands · Polski · Türkçe · 简体中文 · 日本語 · 한국어 · العربية

What is a Spirit Box?

A Spirit Box is a radio that sweeps through AM or FM stations very quickly, catching tiny fragments of sound, static and broadcast. Many people who use one report hearing words or short phrases in the sweep that seem to respond to their questions. This practice is known as ITC (Instrumental Trans-Communication).

WHAT IT IS NOT

- **Not AI.** Nothing is generated, predicted or made up by the device.
- **No apps, no internet,** no pre-recorded words and no word banks.
- **Not a walkie-talkie or a phone.** It does not transmit anything.
- **No built-in recorder.** The device does not record or store anything.

Everything you hear is live radio and noise, in real time.

OUR PROMISE

An honest, hand-checked instrument. We do not promise contact, messages or any particular result. What you hear, and what it means to you, is your own experience. Come to each session with an open heart and a curious, critical mind.

Your first session

1. Find a quiet room. Switch off the TV, music and fans.
2. Start on FM with a sweep of about 150–250 ms. Try AM later for a different sound.
3. Choose how to listen: the built-in speaker, or wired headphones or a wired speaker in the 3.5 mm jack.
4. To keep a record, use your phone in airplane mode near the built-in speaker, or connect a wired recorder to the 3.5 mm jack.
5. Say who you would like to reach, then ask one short, clear question.
6. Wait 15–20 seconds, listen calmly and note what you hear and when.
7. Play your recording back later. A clear word that matches your question means more than a half-heard sound.
8. Keep sessions short (10–20 minutes). Say thank you and switch off.

For a clearer sweep. Phones, Wi-Fi, Bluetooth and other wireless devices can interfere with the radio. Put your phone in airplane mode (it can still record) and use wired headphones, recorders and speakers instead of wireless ones.

Tip: let a friend listen to your recording before you tell them what you heard.

If you are grieving, be gentle with yourself. Stop if you feel frightened, distressed or unwell. If you have thoughts of harming yourself, contact emergency services or a crisis line straight away (findahelpline.com). This device is not a substitute for grief support or professional care.

Quick start

1. Charge fully via USB-C before first use.
2. Hold **POWER** for 3 seconds to switch on.
3. Choose AM or FM with a short press of **AM/FM**.
4. Press **SWP FWD** or **SWP REV** to start sweeping.
5. Set the speed with **SWP –** / **SWP +** and the volume with **VOL –** / **VOL +**.
6. Hold **POWER** for 3 seconds to switch off.


IN THE BOX

- Heaven's Bridge® Spirit Box
- BL-5C rechargeable battery (fitted)
- USB-C to USB-C cable
- This guide

FOR YOUR SESSION

A quiet room. One question at a time. Leave space for the answer. Wired headphones make faint replies easier to hear.

Front buttons

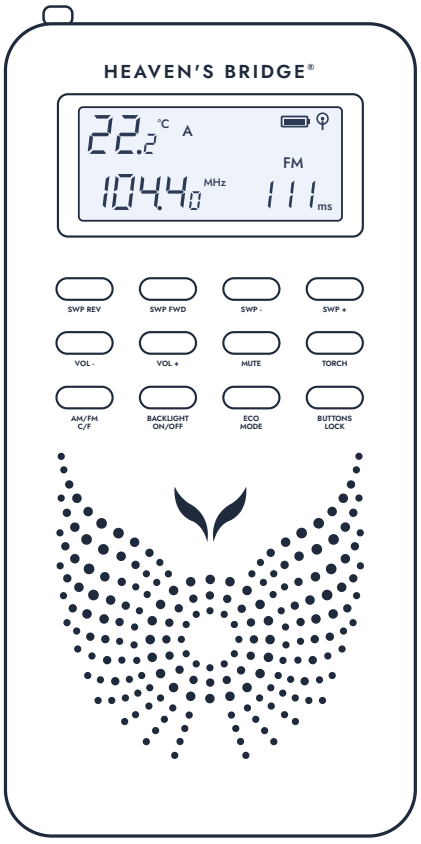


SWP REV	Sweep in reverse (high to low).
SWP FWD	Sweep forward (low to high).
SWP –	Slower sweep.
SWP +	Faster sweep. Range 50–350 ms.
VOL – / VOL +	Volume down / up.
MUTE	Instant silence. The sweep keeps running. Press again to restore sound.
TORCH	Torch on / off (light on the top).
AM/FM · C/F	Short press: AM / FM. Hold 3 s: °C / °F.
BACKLIGHT	Short press: lights the screen for 10 s. Double-press: change display theme (cool / warm / combined).
ECO MODE	The screen stays lit continuously, so there is no need to wake it in the dark. Press again for normal mode.
BUTTONS LOCK	Short press locks all buttons; the sweep and sound keep running. Short press again to unlock.


"Hold" always means 3 seconds.

Side & top

RIGHT SIDE

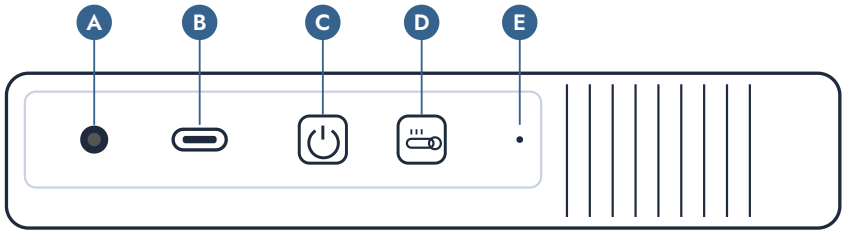

TOP

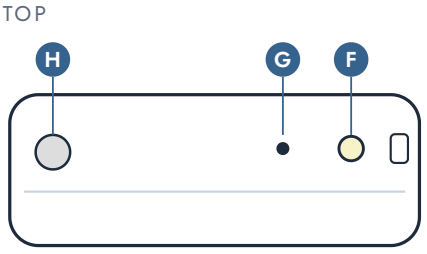

- **A** 3.5 mm jack: wired headphones, speaker or recorder
- **B** USB-C charging port
- **C** **POWER**: hold 3 s to switch on / off
- **D** **TEMP** button: see Temperature
- **E** **RESET**: press gently with a paper clip if the device freezes
- **F** Torch
- **G** Temperature sensor
- **H** **Antenna**: do not remove

Temperature

- Normal mode shows the room temperature.
- **Short press TEMP**: high-sensitivity mode. The reading resets to 0.0 and shows every change in ±0.1° steps, so you can track shifts in the room.
- **Short press again**: reset to 0.0.
- **Hold TEMP 3 s**: back to room temperature.

SCREEN

Shows everything at a glance: frequency, band (AM/FM), sweep speed and direction, temperature, battery level, and lock, mute and ECO status.

BATTERY & CHARGING

Replaceable BL-5C 3.7 V 1000 mAh Li-ion battery. Charge via USB-C (5 V). A full charge takes 3–4 hours and lasts about 10 hours of normal use (less with ECO MODE on). Unplug when fully charged.

Specifications

Bands	AM / FM	**Sweep speed**	50–350 ms
Battery	BL-5C, 3.7 V, 1000 mAh	**Charging**	USB-C, 5 V 600 mA
Speaker	36 mm, 8 ohm, 1 W	**Headphones**	3.5 mm jack
Screen	37 × 19 mm, backlit	**Housing**	ABS
Size / weight	113×57×21 mm, 102 g	**Use at**	0–40 °C
Store at	–20 to +60 °C		

Safety & care

⚠ **Do not remove the antenna.** The antenna on top is the only antenna in this device — there is no internal one. Removing or cutting it can stop the radio working completely. Opening or modifying the device, including removing the antenna, is not covered by our warranty.

- **Not waterproof.** Do not use in rain, high humidity or near water. Never immerse.
- Never put the device or battery in a microwave or oven, or near fire or a heater. Keep out of direct sun and hot cars. Use between 0 and 40 °C.
- Do not drop the device or open it (except the battery cover).
- Use only a BL-5C battery. Do not puncture, crush or short-circuit it. Stop using it if it swells, leaks, smells or gets hot.
- Do not charge unattended or on soft surfaces such as a bed, pillow or sofa.
- Not a toy. Keep the device and battery away from children and pets.
- Lower the volume before using headphones. Do not use while driving or doing anything that needs your full attention.
- **Never act on anything you hear** in a way that could put you or anyone else at risk. The sweep is fragments of radio and noise, not instructions or advice.
- For adults (18+), for research and entertainment. Results are not guaranteed and are open to your own interpretation. Not a substitute for medical, psychological or legal advice.

DISPOSAL

Do not put the device or battery in household rubbish. Dispose of them safely at a dedicated e-waste and battery collection point near you. Tape over the battery terminals first.

Warranty & returns

12-month warranty. Dennis Valchez Pty Ltd warrants this Spirit Box against defects in materials and workmanship for 12 months from the date of purchase.

To claim, email info@dennisvalchez.com with your order number, device number and a photo or video of the fault. If your claim is accepted, we will repair or replace the device or refund you, and cover reasonable return postage. If it is not covered, you pay the postage.

Not covered: damage from drops or impact, water or moisture, heat or fire (including microwaves and ovens), misuse or use against this guide, scratches and normal wear, and any opening or modification, including removing the antenna (the battery cover may be opened).

Change of mind: no refunds, unless your local law gives you a right to cancel (e.g. 14 days in the EU and UK).

> The benefits of this warranty are in addition to your other rights and remedies under the law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Full Warranty Policy: ***dennisvalchez.com/warranty-policy*** *· Returns, terms and privacy: dennisvalchez.com*

dennisvalchez.com · info@dennisvalchez.com

Warrantor: Dennis Valchez Pty Ltd · ABN 20 688 958 456 · PO Box 107, Brighton-Le-Sands NSW 2216, Australia · +61 494 198 001 · info@dennisvalchez.com

Heaven's Bridge® · Dennis Valchez Pty Ltd · Designed in Australia · Made in China